

GUN LOCK OPERATION

1. With the SECURE-IDLE unit engaged, turn the ignition key to the crank position. This will energize the gun lock release.

NOTE: the gun lock will not be energized in the crank position when the SECURE-IDLE unit is not engaged.